



Vert 201 Hanging Kit

Stylish & Secure

Vert 201 Hanging Kit

One of our most popular hanging kits is the aluminum Vert 201. Our engineers designed a system that is easy to assemble, safe, and virtually unseen. This minimal hanging kit is ideal for installations where a modern, clean, stealth look is desired.

Custom Options

The kit comes standard with 40 feet of cable, however, the cable can be ordered by the foot to adjust to your specifications.



Warranty and Disclaimers:

Spyeglass always recommends that a professional installer assemble and hang the screen for the safest possible installation. Incorrect assembly can lead to the screen slipping/falling resulting in personal injury or damage. Spyeglass claims no responsibility for improperly assembled/hung screens.

1. Check part inventory.*

Screen



40' of Cable



Hanging Bar / Aluminum Extrusion



Allen Wrench / Hex Key (x2)



Cable Terminating hardware (x2)



End caps (x2)




Cable Fittings (x2)



*Bar mounting hardware is not supplied, please have your installer choose the correct hardware for your ceiling installation.

2. Have a qualified installer mount the aluminum extrusion to ceiling. Use mounting hardware that is most appropriate for your ceiling application (I.E. truss, sheet rock, false ceiling).
3. Determine desired distance from mounted extrusion to top of projection screen.
4. Use provided equation to determine the cable length. Cut the cable to that length.

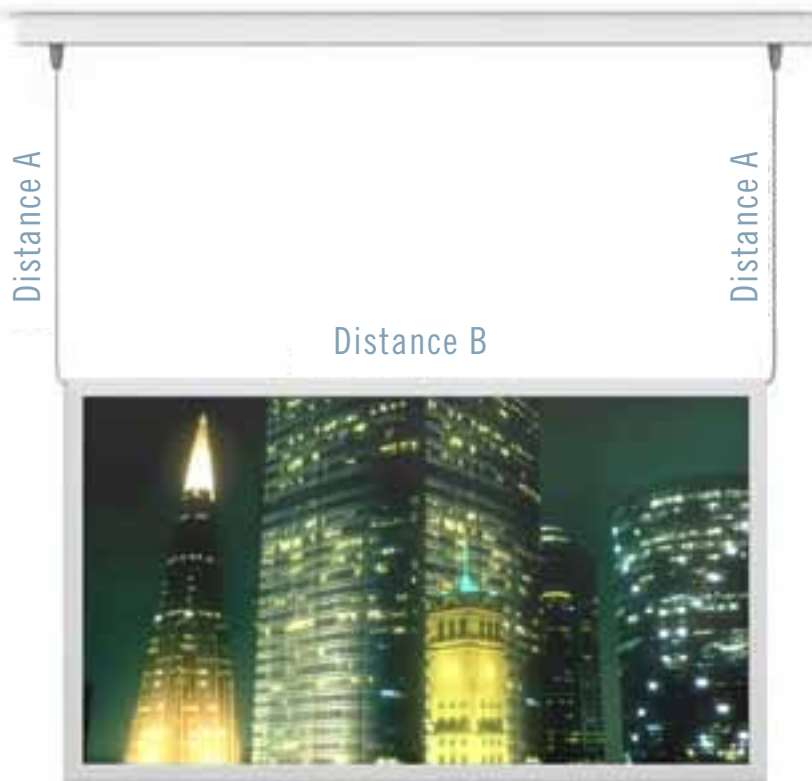

$$\text{Distance A} + \text{Distance B} + \text{Distance A} = \text{Cable Length}$$



5. Thread cable through the screen's 1/8" hole provided on the top side.
6. Disassemble cable terminating hardware by loosening the set screw on large aluminum fitting.



7. Secure cable to cable terminating hardware. Be sure to use Thread Lock to bond set screw.
8. Ensure that the nut is screwed in and timed out on the top of the fitting.



9. Tighten set screw on side to lock in place. Be sure the cable can spin freely inside the housing.



10. Screw t-nuts onto cable housing on both sides.



11. Slide the cable fittings into the track provided on the aluminum mounting bar. Be sure screen is properly supported while the fittings are spaced appropriately apart.




12. Screw cable housing tight, seating it in the track. You may find that you will have better leverage by inserting the socket wrench into the set screw socket on the side and having it assist you in turning the cable housing tight.



Locate end caps.



13. Insert end caps.

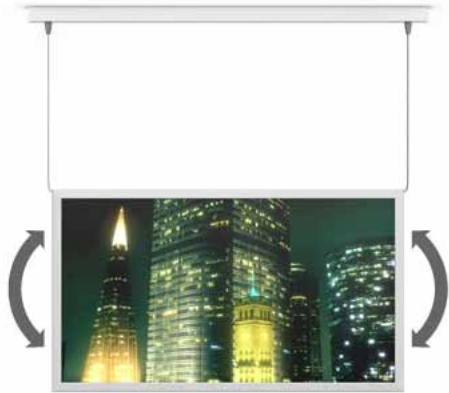

14. Level screen.
15. Tighten down set screws on the top of the frame.
16. Congratulations! Enjoy your Screen.



Cleaning & Care

For dust, simply use a microfiber cloth to remove dust and debris from screen and frame. For a deeper clean, rinse with clean water and dry by blotting with a damp cloth or chamois. **DO NOT** use window cleaning sprays, kitchen scouring compounds or solvents such as acetone, gasoline, benzene, alcohol, carbon tetrachloride, or lacquer thinner. These can scratch/deteriorate the screen surface.