


How to Mount SpyeSmoke Rear Projection Screen Films

To apply these adhesive-backed screens to windows, glass, acrylic or polycarbonate substrates, have the following items ready to use:

- Rear Projection Film
- Spray bottle with water
- Rubber-blade squeegee
- Dry, soft cloth (preferably microfiber)
- Blue Painters Tape to mark the boundaries of the screen (if smaller than the substrate)

***Please note that these films can have slight variation in pigment when viewed from different angles. To reduce or eliminate this affect when seaming together multiple sections, orient all seamed sections in the same direction as cut from the roll. FIGURE 1.**

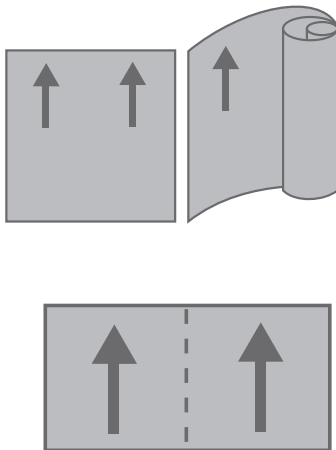

Keep orientation of pieces consistent

FIGURE 1

1. Thoroughly clean the glass or plastic substrate of dirt, dust or oils using mild detergent & water mixture, then squeegee the excess soap/water from the substrate. (We recommend Dawn brand dish soap.)

2. Use the tape to mark the area that the screen will be applied (if the screen is smaller than the substrate.) This can be marked from the opposite side.

3. Peel the release film from the screen half way back and spray the adhesive-side of the screen and the surface of the substrate with water.

4. Place the screen carefully on the substrate while aligning the edges to the tape.

5. Remove the water and any air bubbles with the squeegee blade by gently squeezing the water from the center of the screen toward the edges.

NOTE: The squeegee may glide more smoothly over the top of the screen if it is also sprayed with water.

6. Repeat Steps 3 to 5 for the other half of the screen.

NOTE: Make sure to peel the release film evenly from both corners to prevent the screen from creasing or folding over on itself.

7. Remove the excess water with a dry, soft cloth.

8. Remove the tape.

9. Remove protective cover after mounting.